




# WiFly Wash Bar

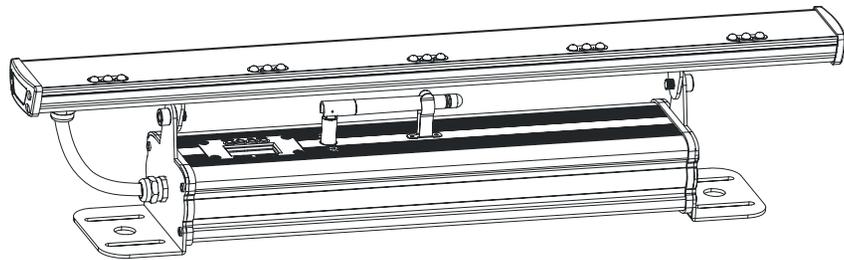

## *User Instructions*

©2013 ADJ Products, LLC all rights reserved. Information, specifications, diagrams, images, and instructions herein are subject to change without notice. ADJ Products, LLC logo and identifying product names and numbers herein are trademarks of ADJ Products, LLC. Copyright protection claimed includes all forms and matters of copyrightable materials and information now allowed by statutory or judicial law or hereinafter granted. Product names used in this document may be trademarks or registered trademarks of their respective companies and are hereby acknowledged. All non-ADJ Products, LLC brands and product names are trademarks or registered trademarks of their respective companies.

**ADJ Products, LLC** and all affiliated companies hereby disclaim any and all liabilities for property, equipment, building, and electrical damages, injuries to any persons, and direct or indirect economic loss associated with the use or reliance of any information contained within this document, and/or as a result of the improper, unsafe, insufficient and negligent assembly, installation, rigging, and operation of this product.

## WiFly Wash Bar

## Introduction

**Unpacking:** Thank you for purchasing the WiFly Wash Bar by ADJ Products, LLC. Every WiFly Wash Bar has been thoroughly tested and has been shipped in perfect operating condition. Carefully check the shipping carton for damage that may have occurred during shipping. If the carton appears to be damaged, carefully inspect your fixture for any damage and be sure all accessories necessary to operate the unit has arrived intact. In the case damage has been found or parts are missing, please contact our toll free customer support number for further instructions. Do not return this unit to your dealer without first contacting customer support.

**Introduction:** The WiFly Wash Bar is a rechargeable lithium battery powered, DMX intelligent, LED bar fixture with ADJ's WiFly TransCeiver with wireless DMX built-in. This unit give you the freedom to set up your fixture where ever you wish without the restrictions of power or DMX cabling. The built-in battery will keep charge for up to 4 hours (full on) from a full, single charge. This wash has three operating modes: Show mode, RGB Dimmer mode, and WiFly DMX control.

**Customer Support:** ADJ Products, LLC provides a customer support line, to provide set up help and to answer any question should you encounter problems during your set up or initial operation. You may also visit us on the web at [www.adj.com](http://www.adj.com) for any comments or suggestions. Service Hours are Monday through Friday 8:00 a.m. to 4:30 p.m. Pacific Standard Time.

Voice: (800) 322-6337  
Fax: (323) 582-2941  
E-mail: [support@AmericanDJ.com](mailto:support@AmericanDJ.com)

**Warning!** To prevent or reduce the risk of electrical shock or fire, do not expose this unit to rain or moisture.

**Caution!** There are no user serviceable parts inside this unit. Do not attempt any repairs yourself, doing so will void your manufactures warranty. In the unlikely event your unit may require service please contact ADJ Products, LLC.

**PLEASE recycle the shipping carton when ever possible.**

## WiFly Wash Bar

## Features

- Rechargeable Lithium Battery
- Multi-Colors
- Three Operating Modes
- Electronic Dimming 0-100%
- WiFly DMX
- 3 DMX Channel Modes: 3 Channel Mode, 4 Channel Mode & 6 Channel Mode
- Built-In ADJ WiFly TransCeiver Wireless DMX

## WiFly Wash Bar

## Warranty Registration

The WiFly Wash Bar carries a 3 year limited warranty. Please fill out the enclosed warranty card to validate your purchase. All returned service items whether under warranty or not, must be freight pre-paid and accompany a return authorization (R.A.) number. The R.A. number must be clearly written on the outside of the return package. A brief description of the problem as well as the R.A. number must also be written down on a piece of paper included in the shipping carton. If the unit is under warranty, you must provide a copy of your proof of purchase invoice. You may obtain a R.A. number by contacting our customer support team on our customer support number. All packages returned to the service department not displaying a R.A. number on the outside of the package will be returned to the shipper.

## WiFly Wash Bar

## Installation

The unit should be mounted using a mounting clamp (not provided), affixing it to the mounting bracket that is provided with the unit. Always ensure that the unit is firmly fixed to avoid vibration and slipping while operating. Always ensure that the structure to which you are attaching the unit is secure and is able to support a weight of 10 times the unit's weight. Also, always use a safety cable that can hold 12 times the weight of the unit when installing the fixture. The equipment must be installed by a professional, and it must be installed in a place where it is out of the reach of people's grasp.

- To reduce the risk of electrical shock or fire, do not expose this unit rain or moisture
- Do not spill water or other liquids into or on to your unit.
- Do not attempt to operate this unit if the power cord has been frayed or broken. Do not attempt to remove or break off the ground prong from the electrical cord. This prong is used to reduce the risk of electrical shock and fire in case of an internal short.
- Disconnect from main power before making any type of connection.
- Do not remove the cover under any conditions. There are no user serviceable parts inside.
- Never operate this unit when it's cover is removed.
- Never plug this unit in to a dimmer pack
- Always be sure to mount this unit in an area that will allow proper ventilation. Allow about 6" (15cm) between this device and a wall.
- Do not attempt to operate this unit, if it becomes damaged.
- This unit is intended for indoor use only, use of this product out doors voids all warranties.
- During long periods of non-use, disconnect the unit's main power.
- Always mount this unit in safe and stable matter.
- Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to the point they exit from the unit.
- Cleaning -The fixture should be cleaned only as recommended by the manufacturer. See page 30 for cleaning details.
- Heat -The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
- The fixture should be serviced by qualified service personnel when:
  - A. The power-supply cord or the plug has been damaged.
  - B. Objects have fallen, or liquid has been spilled into the appliance.
  - C. The appliance has been exposed to rain or water.
  - D. The appliance does not appear to operate normally or exhibits a marked change in performance.

**CAUTION: This unit like any wireless device is highly susceptible to static electricity. Static electricity can severely damage the unit. Before touching the antenna, please ground/discharge yourself.**

## 1. Handling of Batteries

### 1.1 Do Not Short Circuit the Battery

Try to never short circuit the battery. It generates a very high current which could cause the battery to overheat which may result in electrolyte gel leakage, harmful fumes, or explosion. The LIR tabs may easily short-circuit by placing them on conductive surface. A short circuit may lead to heat build up and damage of the battery. An appropriate circuitry with PCM is employed to protect accidental short circuit of the battery pack.

### 1.2 Mechanical shock

Dropping the unit, impact hit, bending, etc. may cause failure or shortend life of the LIR battery.

## 3. Other

### 3.1 Battery connection

- 1). Direct soldering of wire leads or devices to the battery is strictly prohibited.
- 2). Lead tabs with pre-soldered wiring shall be spot welded to the batteries. Direct soldering may cause damage of components, such as separator and insulator, by heat build up.

### 3.2 Prevention of short circuit within a battery pack

There is enough insulation layers between wiring and the batteries to provide extra safety protection. The battery pack is constructed in a way that no short circuit will occur which may cause smoke or fire.

### 3.3 Do No Disassemble the Batteries

- 1). Never disassemble the batteries.  
Doing this may cause a internal short circuit in the battery, which may lead to harmful fumes, fire, explosion, or other problems.
- 2). Electrolyte Gel is harmful  
Electrolyte Gel should not leak from the LIR battery. Should the electrolyte gel come into contact with the skin or eyes, flush the

area of contact immediately with fresh water and seek medical attention immediately.

### **3.4 Do Not Expose the Battery to Heat or Fire**

Never incinerate or dispose of the batteries in fire. This may cause an explosion, which would be very dangerous.

### **3.5 Do Not Expose the Battery to water or liquids**

Never soak/drop the batteries in liquids such as water, seawater, drinks such as soft drinks, juices, coffee or other.

### **3.6 Battery Replacement**

For battery replacement please contact ADJ customer support (800) 322-6337.

### **3.7 Do Not use a damaged Battery**

The battery could be damaged during shipping, caused by shock. Should the battery be found damaged, including damages to the plastic casing of the battery, deformation of the battery package, smelling of an electrolyte, or leakage of the electrolyte gel, or other, DO NOT use the battery. A battery with a odor of electrolyte or a gel leakage should be placed away from fire to avoid fire or explosion.

## **4. Battery Storage**

When storing the battery, it should be stored at room temperature, with a charge of at least 50%. We recommend that during long periods of storage that the battery be charged every 6 months. Doing this will prolong the life of the battery and will also make sure that the battery charge does not fall below the 30% mark.

## **5. Other Chemical Reaction**

Because batteries utilize a chemical reaction, battery performance will deteriorate over time even if stored for a long period of time without being used. In addition, if the various usage conditions such as charge, discharge, ambient temperature, etc. are not maintained within the specified ranges, the

life expectancy of the battery maybe shortened or the device in which the battery is used may be damaged by electrolyte gel leakage. If the batteries cannot maintain a charge for long periods of time, even when they are charged correctly, this may indicate it is time to change the battery.


## **6. Battery Disposal**

Please dispose of battery according to local regulations.

**Power Supply:** The ADJ WiFly Wash Bar power supply contains a automatic voltage switch, which will auto sense the voltage when it is plugged into the power source. With this switch there is no need to worry about the correct power voltage, this unit can be plugged in anywhere.

**DMX-512:** DMX is short for Digital Multiplex. This is a universal protocol used as a form of communication between intelligent fixtures and controllers. A DMX controller sends DMX data instructions from the controller to the fixture.

**DMX Operation):** The WiFly Wash Bar can be controlled via DMX-512 protocol. The WiFly Wash Bar has 3 DMX channel modes, please see page 9 for the different modes. The DMX address is set on the top base of the WiFly Wash Bar.

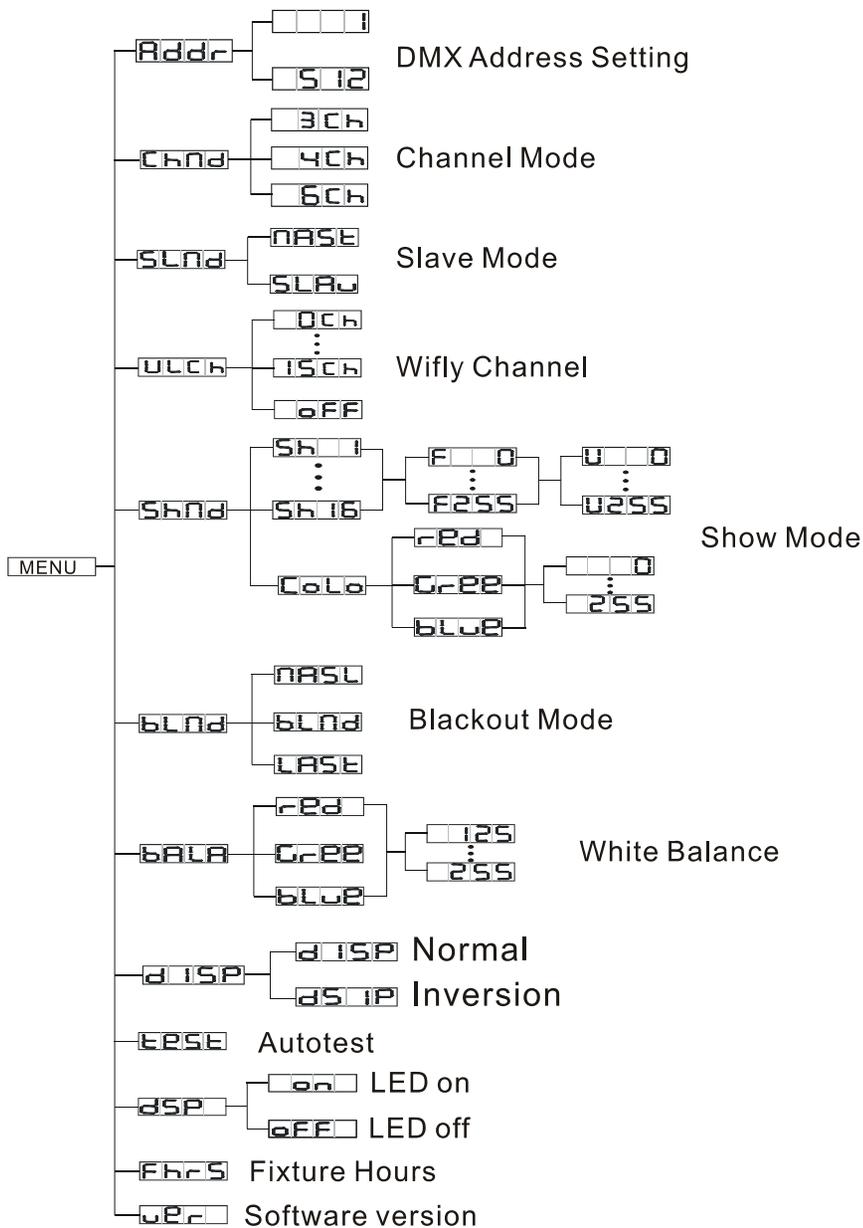

**System Menu:** When making adjustments press **ENTER** to confirm your setup and then press and hold the **MENU** button for at least **3 seconds**. To exit without making any adjustments press the **MENU** button.

**ADDR - DMX Address Setting.**

1. Press the either the MENU, UP, or DOWN buttons until “**ADDR**” is displayed, press ENTER.
2. The current address will now be displayed and flashing. Press the UP or DOWN buttons to find your desired address. Press ENTER and then press and hold the MENU button to set your desired DMX address.

**CHND - This will let select your desired DMX channel mode.**

1. Press the either the MENU button until “**CHND**” is displayed, press ENTER. Either “**3CH**”, “**4CH**”, or “**6CH**” will be displayed
2. Press the UP or DOWN buttons to find your desired DMX mode and press ENTER to confirm and exit.

**SLND - This will let you set unit as a master or slave in a master/slave configuration.**

1. Press the MENU button until “**SLND**” is displayed, press ENTER. Either “**MAST**” or “**SLAV**” will be displayed.
2. Press the UP or DOWN buttons until your desired setting is displayed, press ENTER.

**ULCH - This will let you select and set your WiFly address.**

1. Press the MENU button until “**ULCH**” is displayed, press ENTER.

2. “X” will now be displayed, “X” representing a number between 0-15. Press the UP or DOWN buttons to find your WiFly address.
3. When you have found your desired WiFly address press ENTER to confirm and exit.

## **SHND: SH 1 - SH16 - Show modes 1-16 (Factory programs) or Color mode.**

1. Press the MENU button until “**SHND**” is displayed, press ENTER.
2. “**Sh X**” will now be displayed, “X” representing a number between 1-16 or “**COLO**” will be displayed. Programs 1-16 are factory programs. “**COLO**” is a RGB mode, in this mode you are able to adjust the RGB colors to create your own desired color. Use the UP or DOWN buttons to find you desired mode then press ENTER.
3. If you select Show mode, use the UP or DOWN buttons to find your desired show, then press ENTER. You are now be able to adjust the fade time (“**FXXX**”). The fade time can be adjusted between “**F0**” (fastest) and “**F255**” (slowest). After adjusting the fade time, press ENTER to adjust the wait time (“**UXXX**”).
4. If you select Color mode, use the UP or DOWN buttons find the color you would like to adjust. When you find you desired color, press the ENTER button to select. Then use the UP and DOWN buttons to adjust the output intensity of the selected color. When you have found your desired output intensity for your selected color, press ENTER.
5. When you have finished press ENTER, then press and hold the MENU button for at least 3 seconds to activate.

## **BLND - This mode can be used as a precaution mode, that in case the DMX signal is lost, the operating mode chosen in**

**the setup is the running mode the fixture will go into when the DMX signal is lost. You can also set this as the operating mode you would like the unit to return to when power is applied.**

1. Press the MENU button until “**BLND**” is displayed, press ENTER.
2. Either “**MASL**”, “**blnd**”, or “**LAST**” will be displayed. Choose an operating mode you would like the unit to start up in when power is applied or the DMX signal is lost.
  - “**MASL**” (Master/Slave) - If the DMX signal is lost or power is applied, the unit will automatically go into Master Slave mode.
  - “**blnd**” (Blackout) - If the DMX signal is lost or power is applied, the unit will automatically go into stand by mode.
  - “**LAST**” Last State - If the DMX signal is lost the fixture will stay in the last DMX set up. If power is applied and this mode is set, the unit will automatically go into the last DMX set up.
3. Press ENTER to confirm your desired set up.

## **BALA - With this function you can adjust the RGB colors and change the tone of the White Output.**

1. Press the MENU button until “**BALA**” is displayed, press ENTER.
2. Use the UP or DOWN buttons to find the color you wish to adjust.
3. Once you find the color you want to adjust press ENTER, the displayed value will begin to flash. Use the UP or DOWN buttons to adjust the value. Once you have made your adjustment press ENTER.
4. Repeat steps 2-3 until satisfied.

**DISP** - This will “flip” the LED display 180°.

1. Press the MENU button until “**DISP**” is displayed, press ENTER.
2. Either “**DISP**” or “**DSIP**” will now be displayed. Press the ENTER button to “flip” the display.

**TEST** - This function will run a self test program.

1. Press the MENU button until “**TEST**” is displayed, press ENTER.
2. The fixture will now run a self test.

**DSP** - With this function you can have the LED display turn off after 10 seconds.

1. Press the MENU button until “**DSP**” is displayed, press ENTER.
2. The display will show either “**ON**” or “**OFF**”. Press the UP or DOWN buttons to select “**ON**” to keep the LED display on at all times, or “**OFF**” to switch to have the LED display switch off after 10 seconds. To make the display reappear, press and hold the MENU button for at least 5 secs.
3. Press ENTER to confirm. To make the display reappear, press and hold the MENU button for at least 5 secs.

**FHRS** - With this function you can display the running time of the fixture.

1. Press the MENU button until “**FHRS**” is displayed, press ENTER.
2. The running time of the fixture will now be displayed. Press MENU to exit.

**VER** - With this function you can display the version software of the fixture.

1. Tap the MENU button until “**VER**” is displayed, press ENTER.
2. The software version will now be displayed. Press MENU to exit.

**DMX Mode:**

**Your DMX controller must be connected to a ADJ WiFly TransCeiver (sold separately).** Operating through a DMX controller gives the user the freedom to create their own programs tailored to their own individual needs. You are able to communicate up to 400 feet (open line of sight). The WiFly Wash Bar has 3 DMX modes: 3 Channel mode, 4 Channel mode, and a 6 Channel mode, See pages 16-18 for each modes DMX traits.

1. This function will allow you to control each individual fixture's traits with a standard DMX 512 controller.
2. To run your fixture in DMX mode press the MODE button until "Addr" is displayed, and press ENTER. The current address that is set will be displayed Use the UP or DOWN buttons to select your desired DMX address, then press ENTER.
3. To select your desired DMX Channel mode press the MODE button until "Chnd" is displayed, and then press ENTER.
4. Use the UP or DOWN buttons to scroll through the DMX Channel modes. The Channel modes are listed below:
  - To run the 3 Channel Mode, press the UP or DOWN buttons until "3Ch" is displayed.
  - To run the 4 Channel Mode, press the UP or DOWN buttons button until "4Ch" is displayed.
  - To run the 6 Channel Mode, press the UP or DOWN buttons button until "6Ch" is displayed.

Once you have found your desired Channel mode, press ENTER.
5. Please see pages 16-18 for DMX values and traits.
6. After you have chosen your desired DMX Channel you need to set the WiFly address. Follow the instructions on pages 9-10 to set the Wireless address. The address must match the address set on the WiFly Transceiver.
7. Apply power to the ADJ WiFly Transceiver. The fixture must be set up to the same address as the fixture first before you apply power to WiFly TransCeiver.
8. If everything is set up properly and the fixture is receiving a Wireless signal, Wireless status will be indicated in the LED screen.

This feature will let you link units to run in a master-slave mode.

1. Follow the instructions on pages 9-10 to set the Wireless address.  
**The addresses on each fixture must be the same.**
2. After you have set the WiFly address, follow the instructions on page 9 to assign your Master unit. After setting your Master unit, set your desired operating mode.
3. For the "Slave" units, put the unit in Slave mode. See page 9 to assign the unit as a Slave.
4. Put the antennas in either a up position or down position.

**Note:** All antennas must be in the same position, they must either be all up or all down, but never at an angle.

**NOTE: If they do not sync up master-slave, switch the Master fixtures power switch off then on again.**

<b>WiFly Wash Bar 3 Channels - DMX Values &amp; Functions</b>		
<b>Channel</b>	<b>Value</b>	<b>Function</b>
1	0 - 255	RED 0% - 100%
2	0 - 255	GREEN 0% - 100%
3	0 - 255	BLUE 0% - 100%

<b>WiFly Wash Bar 4 Channels - DMX Values &amp; Functions</b>		
<b>Channel</b>	<b>Value</b>	<b>Function</b>
1	0 - 255	RED 0% - 100%
2	0 - 255	GREEN 0% - 100%
3	0 - 255	BLUE 0% - 100%
4	0 - 255	MASTER DIMMER 0% - 100%

<b>WiFly Wash Bar 6 Channels - DMX Values &amp; Functions</b>		
<b>Channel</b>	<b>Value</b>	<b>Function</b>
1	0 - 255	RED 0% - 100%
2	0 - 255	GREEN 0% - 100%
3	0 - 255	BLUE 0% - 100%
4	0 - 255	MASTER DIMMER 0% - 100%
5	0 - 10 11 - 17 18 - 24 25 - 31 32 - 38 39 - 45 46 - 52 53 - 59 60 - 66 67 - 73 74 - 80 81 - 87 88 - 94 95 - 101 102 - 108 109 - 115 116 - 122 123 - 129 130 - 136 137 - 143 144 - 150 151 - 157 158 - 164 165 - 171 172 - 178	COLOR MACROS EFFECTS CHASE BASTARD AMBER MEDIUM AMBER PALE AMBER GOLD GALLO GOLD GOLDEN AMBER LIGHT RED MEDIUM RED MEDIUM PINK BROADWAY PINK FOLLIES PINK LIGHT LAVENDER SPECIAL LAVENDER LAVENDER INDIGO HEMSLEY BLUE TIPTON BLUE LIGHT STEEL BLUE LIGHT SKY BLUE SKY BLUE BRILLIANT BLUE LIGHT GREEN BLUE BRIGHT BLUE PRIMARY BLUE CONGO BLUE

WiFly Wash Bar 6 Channels - DMX Values & Functions		
Channel	Value	Function
5	179 - 185	COLOR MACROS
	186 - 192	PALE YELLOW GREEN
	193 - 199	MOSS GREEN
	200 - 206	PRIMARY GREEN
	207 - 213	DOUBLE CTB
	214 - 220	FULL CTB
	221 - 227	HALF CTB
	228 - 234	DARK BLUE
	235 - 241	WHITE
	242 - 248	FULL RED
	249 - 255	FULL GREEN
6	0 - 7	STROBING/SHUTTER OFF
	8 - 15	OPEN
	16 - 131	STROBING SLOW - FAST
	132 - 139	OPEN
	140 - 181	FAST CLOSE - SLOW OPEN
	182 - 189	OPEN
	190 - 231	FAST OPEN - SLOW CLOSE
	232 - 239	OPEN
	240 - 247	RANDOM STROBE
	248 - 255	OPEN

## WiFly Wash Bar Battery Status & Charging

### **Battery Status:**

This function is used to check the life status of the battery. Plug the fixture in and press the MODE button until “bXXX” is displayed. “XXX” represents an number between “000” and “100”. The number that is displayed is the remaining battery life. If the unit does not turn ON, it probably means the battery is dead. ***Please do not let the battery fully die, this severely shortens the life of the battery.***

**Example:** If “b 50” is displayed, the battery is at half life. If “b 25” is displayed, the battery is at 25% life.

**NOTE:** When the battery is charging or if the battery life is below 30% the digital display will flash.

**NOTE:** After 20 seconds of inactivity, the display will revert back to the battery life display.


**Battery Recharge:** To recharge the battery, plug the supplied AC cord into the AC input on the side of the unit and plug the other end into a matching power supply. It takes about 2.5 hours to reach full charge. **The indicator light on the charger will glow green when the units battery is fully charged.**

**Note:** When unplugging the unit from charging and then applying power via battery, there will be a minimal charge drop.

## WiFly Wash Bar

## Photometric Chart

Beam angle 170°	R	41.58	10.40	4.620	2.599	1.663	(Lux)
	G	44.18	11.051	4.909	2.761	1.767	
	B	12.04	3.009	1.337	0.7522	0.4814	
	RGB	94.71	23.68	10.52	5.919	3.788	
	spot Diameter	293.90	587.80	881.71	1175.61	1469.51	(CM)

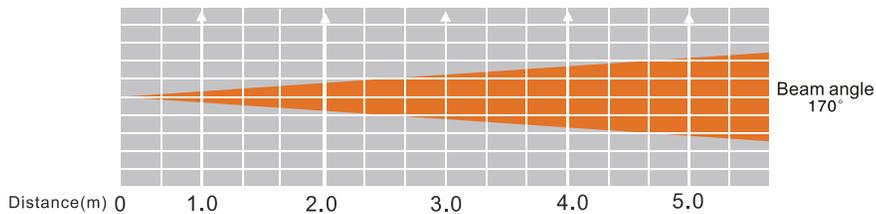

## WiFly Wash Bar

## Cleaning

Due to fog residue, smoke, and dust cleaning the internal and external optical lenses must be carried out periodically to optimize light output.

1. Use normal glass cleaner and a soft cloth to wipe down the outside casing.
2. Clean the external optics with glass cleaner and a soft cloth every 20 days.
3. Always be sure to dry all parts completely before plugging the unit back in.

Cleaning frequency depends on the environment in which the fixture operates (i.e. smoke, fog residue, dust, dew).

## WiFly Wash Bar

## Warranty

### MANUFACTURER'S LIMITED WARRANTY

- A. ADJ Products, LLC hereby warrants, to the original purchaser, ADJ Products, LLC products to be free of manufacturing defects in material and workmanship for a prescribed period from the date of purchase (see specific warranty period on reverse). This warranty shall be valid only if the product is purchased within the United States of America, including possessions and territories. It is the owner's responsibility to establish the date and place of purchase by acceptable evidence, at the time service is sought.
- B. **For warranty service you must obtain a Return Authorization number (RA#) before sending back the product—please contact ADJ Products, LLC Service Department at 800-322-6337.** Send the product only to the ADJ Products, LLC factory. All shipping charges must be pre-paid. If the requested repairs or service (including parts replacement) are within the terms of this warranty, ADJ Products, LLC will pay return shipping charges only to a designated point within the United States. If the entire instrument is sent, it must be shipped in its original package. No accessories should be shipped with the product. If any accessories are shipped with the product, ADJ Products, LLC shall have no liability whatsoever for loss of or damage to any such accessories, nor for the safe return thereof.
- C. This warranty is void if the serial number has been altered or removed; if the product is modified in any manner which ADJ Products, LLC concludes, after inspection, affects the reliability of the product; if the product has been repaired or serviced by anyone other than the ADJ Products, LLC factory unless prior written authorization was issued to purchaser by ADJ Products, LLC; if the product is damaged because not properly maintained as set forth in the instruction manual.
- D. This is not a service contract, and this warranty does not include maintenance, cleaning or periodic check up. During the period specified above, ADJ Products, LLC will replace defective parts at its expense with new or refurbished parts, and will absorb all expenses for warranty service and repair labor by reason of defects in material or workmanship. The sole responsibility of ADJ Products, LLC under this warranty shall be limited to the repair of the product, or replacement thereof, including parts, at the sole discretion of ADJ Products, LLC. All products covered by this warranty were manufactured after August 15, 2012, and bear identifying marks to that effect.
- E. ADJ Products, LLC reserves the right to make changes in design and/or improvements upon its products without any obligation to include these changes in any products theretofore manufactured.

No warranty, whether expressed or implied, is given or made with respect to any accessory supplied with products described above. Except to the extent prohibited by applicable law, all implied warranties made by ADJ Products, LLC in connection with this product, including warranties of merchantability or fitness, are limited in duration to the warranty period set forth above. And no warranties, whether expressed or implied, including warranties of merchantability or fitness, shall apply to this product after said period has expired. The consumer's and/or Dealer's sole remedy shall be such repair or replacement as is expressly provided above; and under no circumstances shall ADJ Products, LLC be liable for any loss or damage, direct or consequential, arising out of the use of, or inability to use, this product.

This warranty is the only written warranty applicable to ADJ Products, LLC Products and supersedes all prior warranties and written descriptions of warranty terms and conditions heretofore published.

### MANUFACTURER'S LIMITED WARRANTY PERIODS:

- **Lighting Products = 1-year (365 days) Limited Warranty** (Such as: Special Effect Lighting, Intelligent Lighting, UV lighting, Strobes, Fog Machines, Bubble Machines, Mirror Balls, Par Cans, Trussing, Lighting Stands etc. excluding LEDs and lamps)
- **Laser Products = 90-Day Limited Warranty**
- **L.E.D. Products = 3-year (1095 days) Limited Warranty** (excluding motors, PCB boards, and power supplies, which have a 1-year (365 day Limited Warranty) and batteries which have a 180 day limited warranty). Only the L.E.D.s carry a 3-year warranty

**Model: WiFly Wash Bar**

Voltage:	100V ~ 240V/50~60Hz or DC12V
Battery Life:	4 Hours Full On (Full Charge)
Battery Lifetime*:	Average Lifetime is 500 Charges
LEDs:	15 x 1W LEDs (5 Red, 5 Green, & 5 Blue)
Beam Angle:	120 Degrees
Working Position:	Any safe working position
Power Draw:	18W
Weight:	5lbs./ 2.2Kgs.
Dimensions:	20.25" (L) x 3.25" (W) x 4.25" (H) 513 x 78 x 107mm
Colors:	RGB Color Mixing
DMX Channels:	3 DMX Modes: 3 Channel Mode, 4 Channel Mode, & 6 Channel Mode
Warranty**:	3 Year (1,095 days) Limited Warranty

\* This depends on charging frequency

\*\*See Warranty page for details

**Auto Sensing Voltage:** This fixture contains a automatic voltage switch, which will auto sense the voltage when it is plugged into the power source.

**Please Note:** Specifications and improvements in the design of this unit and this manual are subject to change without any prior written notice.

ADJ Products, LLC  
 6122 S. Eastern Ave. Los Angeles, CA 90040 USA  
 Tel: 323-582-2650 / Fax: 323-725-6100  
 Web: www.adj.com / E-mail: info@adj.com

A.D.J. Supply Europe B.V.  
 Junostraat 2  
 6468 EW Kerkrade  
 Netherlands

Follow Us On:



facebook.com/americanadj  
 twitter.com/americanadj  
 youtube.com/adjlighting

service@adjgroup.eu / www.adj.eu  
 Tel: +31 45 546 85 00 / Fax: +31 45 546 85 99